



QUICK START GUIDE



IR-232 Setup




17630 Davenport, Suite 113
Dallas, Texas 75252-5963
Phone 972-931-2728
www.crwww.com
support@crwww.com

Install IR ToolKit software

1. Insert the included CR Catalog CD into your computer's CR-ROM drive.
2. Click on IR ToolKit from the left-hand menu
3. Use Select Software to install:
 - a. MS Framework 1.1 (if not already installed)
 - b. IR ToolKit Software

Create and Install COM cable

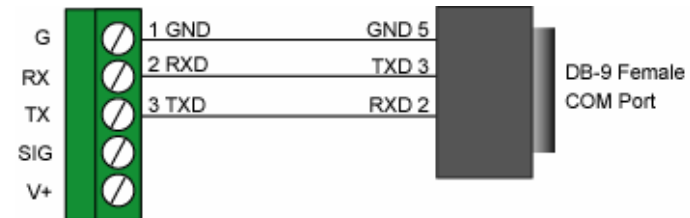

1. Create a captive-screw to COM cable, as shown above.
2. Connect between the IR-232 and your PC.
3. Connect included power supply to IR-232.

As an option, you can also purchase an IR-232 COM Adapter that provides a male DB9 to screw-terminal interface to use with your standard null-modem programming cables (DB-9 Female to Female, RX/TX swapped).

Set DIP Switch 2

Set the IR-232 DIP switch 2 to ON (Up). This locks RS-232 to default settings (9600 baud, 8 data bits, No parity, 1 stop bit).

Power and Connect

Plug in included power supply, and connect to PC.

Launch IR ToolKit

IR ToolKit will automatically find and connect the IR-232.

Review included manual to review IR-232 operation, IR ToolKit software, and strategies for typical applications.